

Continue

























Before you begin Before you begin Plugging in for power • Connect the supplied power adaptor to the unit's Power jack, and connect the other end to a convenient wall outlet. • Once connected with power, the clock flashes. Refer to the Clock section for instructions on properly setting the Clock. Battery back-up operation • This clock radio is equipped with a timekeeping system that can be powered with two AA batteries (not included). The power failure protection circuit will not operate unless the batteries are installed. • When normal household power is interrupted or AC/DC adaptor is unplugged, the battery will power the clock radio to keep track of time and alarm settings programmed into memory. • When the battery backup functions, the digital display will not light, however, the alarm will still sound during power interruption if the remaining battery power is adequate. • Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm. To install the battery: 1. Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet. 2. Connect two AA batteries (not included) to the connector plug. 3. Replace the compartment door. General controls IMPORTANT SAFETY INSTRUCTIONS PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE unused for long periods of time. • Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. ADDITIONAL SAFETY INFORMATION • The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position. • Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide. • Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. • Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent airflow through vent openings. • Do not place lighted candles, cigarettes, cigars, etc. on the product. • Care should be taken so that objects do not fall into the product. • Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components. • The marking information is located at the bottom of apparatus. • To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains. • AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use. • The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. • No naked flame sources such as lighted candles should be placed on the apparatus. • Attention should be drawn to the environmental aspects of battery disposal. • The use of apparatus in moderate climates. Important battery precautions • Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture. • Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more. • If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak. • Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury. • Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like. Ecology Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles. Electrical power information AC/DC Adaptor: Input: 100 - 240 V ~ AC 50/60 Hz Output: 5.0 V---DC 1.2A Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. FCC Information FCC Information Alkaline (1.5V) battery is recommended. Carbon-zinc battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if alarm is not operated) which should take care of short, nuisance-type AC power failures. To preserve battery life, the unit should remain plugged into an AC outlet. As the battery gets older, its voltage drops and memory may be lost. Be sure to replace the battery periodically. Battery should be removed if the unit will be stored for more than one month. A leaky battery can badly damage the clock radio. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment. Industry Canada Regulatory Information CAN ICES-3 (B)/NMB-3 (B) Avis d'Industrie Canada CAN ICES-3 (B)/NMB-3 (B) Power failure indicator If you have not installed the two AA batteries in the product, or the batteries run out while AC/DC adaptor is disconnected, all the settings (clock and alarm) will be lost. After AC/DC adaptor is reconnected, the Digital Display will flash to indicate that power was interrupted and you should readjust the time settings. Back view USB - To charge your cell phone or other USB powered electronic devices DC IN - Plug in for power SmartSnooze™ This operation allows extra sleep time when the alarm sounds. The alarm can be turned off temporarily by pressing SNOOZE or any one of the SmartSnooze™ buttons until the snooze period is over. TM buttons include: ON/FM/AUX, TUNE-/HOUR+ and TUNE+/MINUTE+ Snooze function may be used repeatedly for up to 2 hours. After this, the alarm will turn off until the next alarm conditions are met. IMPORTANTES INSTRUCCIONES DE SEGURIDADFAVOR DE GUARDAR ESTO PARA UNA REFERENCIA FUTURA EN/EN F) Before you beginBefore you begin Clock Plugging in for power Connect the supplied power adaptor to the unit's Power jack, and connect the other end to a convenient wall outlet. Once connected with power, the clock flashes. Refer to the Clock section for instructions on properly setting the Clock. Battery back-up operation This clock radio is equipped with a timekeeping system that can be powered with two AA batteries (not included). The power failure protection circuit will not operate unless the batteries are installed. When normal household power is interrupted or AC/DC adaptor is unplugged, the battery will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the alarm will still sound during power interruption if the remaining battery power is adequate. Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm. To install the battery: 1. Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet. 2. Connect two AA batteries (not included) to the connector plug. 3. Replace the compartment door. General controls Setting clock manually. 1. Press and hold Set Time to enter the clock setting mode. 2. Press HOUR+ and MINUTE+ to adjust the time. Press and hold to adjust the time value quickly. The digits on the display ash in clock setting mode. The clock is in 12 hour format. The AM or PM indicator will illuminate to indicate the current time setting. 3. Press Set Time again to save the time setting. Radio Setting alarm time and Selecting alarm source. 1. Press and hold Set Alarm 1/ Set Alarm 2 to select ALARM 1 or ALARM 2 setting mode. 2. Press HOUR+ and MINUTE+ to set the alarm time. Press and hold to decrease or increase the time value quickly. The digits ash on the display in alarm time setting mode. The clock is in 12 hour format. The AM or PM indicator will light to show the current time. Alarm function 1. Connect your auxiliary source (e.g. mp3 player) to the AUX input jack on the right side of the unit with an audio cable (not included). 2. Turn on your auxiliary source (mp3 player, smartphone, etc.). 3. Press FM/AUX to listen to auxiliary source. The AUX indicator on the front will turn on. Press FM/AUX again to switch back to listen to the radio, or press OFF to turn off audio playback. Press BRIGHTNESS to switch between HI (high) or LO (low) to adjust the brightness of the display. Use the USB charging port to charge your smartphone or to power USB powered devices such as a USB type lamp or fan. your cell phone USB cable (not included) To connect your cell phone for charging: Use a USB cable (not included) to connect your cell phone to the USB connector of the unit. Your cell phone should start charging. In sleep mode, the audio playback will turn off automatically after a specified time (up to 2 hours). 1. Press SLEEP to activate the sleep countdown timer. 2. Press SLEEP repeatedly to cycle through the available durations for Sleep Mode (90min, 80min, 70min ... 10min or OFF). The maximum time is 90 minutes. 3. To view remaining time in sleep mode, press and hold SLEEP. 4. To cancel the sleep function, press OFF. Sleep functionAuxiliary source Brightness control USB chargingWarranty information 12 Month Limited Warranty Applies to RCA Clock Radios VOXX Accessories Corporation (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, les, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems. This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state. Recommendations before returning your product for a warranty claim: Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below. Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings. Vox Return Centre, c/o Genco ATC, 700 Commerce Parkway West Drive, Suite C, Greenwood, IN 46143 1-800-645-4994 For Canada Customers, please ship to: Vox Return Centre c/o Genco 6685 Kennedy Road, Unit#3, Door 14, Mississauga, Ontario L5T 3A5 IMPORTANT SAFETY INSTRUCTIONSPLEASE READ AND SAVE THIS FOR FUTURE REFERENCE Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. ADDITIONAL SAFETY INFORMATION The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position. Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide. Apparatus shall not be exposed to dripping or splashing and no objects led with liquids, such as vases, shall be placed on the apparatus. Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent airflow through vent openings. Do not place lighted candles, cigarettes, cigars, etc. on the product. Care should be taken so that objects do not fall into the product. Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components. The marking information is located at the bottom of apparatus. To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains. AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. • No naked flame sources such as lighted candles should be placed on the apparatus. Attention should be drawn to the environmental aspects of battery disposal. The use of apparatus in moderate climates. Important battery precautions Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture. • Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more. • If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak. Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury. Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like. EcologyHelp protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles. Electrical power informationAC/DC Adaptor: Input: 100 - 240 V ~ AC 50/60 Hz Output: 5.0 V---DC 1.2A Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Portable Cart Warning FCC InformationFCC Information English BeepAlarm 1 USB CHARGING CLOCK RADIOAlarm 2Beep MusicAux SleepPM FM 3. Press Set Alarm 1/ Set Alarm 2 again to save the time setting. 4. Press Set Alarm 1/ Set Alarm 2 repeatedly to select your choice of alarm source (Beep / Music / Off). The corresponding alarm setting icon will light when alarm is set to activate. Wake to alarmThe unit is equipped with GRAB-U-WAKE. The alarm volume will increase gradually to its maximum in about 30 to 45 seconds. Ways to turn off alarm To silence the alarm function momentarily, press SNOOZE. The alarm or radio will activate again when the snooze period (9 minutes) is over. (see SmartSnooze™ section for more info) To turn off the alarm, press OFF. The alarm will activate again the next day. To disable the alarm function completely, press Set Alarm 1/ Set Alarm 2 repeatedly until no alarm mode icon shows on the display. RC142Alkaline (1.5V) battery is recommended. Carbon-zinc battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if alarm is not operated) which should take care of short, nuisance-type AC power failures. To preserve battery life, the unit should remain plugged into an AC outlet. As the battery gets older, its voltage drops and memory may be lost. Be sure to replace the battery periodically. Battery should be removed if the unit will be stored for more than one month. A leaky battery can badly damage the clock radio. Charging function may not be supported for all phones or electronic devices. If wake to Music is selected, the alarm will playback the last tuned radio station when it goes off. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment. Industry Canada Regulatory Information CAN ICES-3 (B)/NMB-3 (B) Avis d'Industrie Canada CAN ICES-3 (B)/NMB-3 (B) Power failure indicatorIf you have not installed the two AA batteries in the product, or the batteries run out while AC/DC adaptor is disconnected, all the settings (clock and alarm) will be lost. After AC/DC adaptor is reconnected, the Digital Display will ash to indicate that power was interrupted and you should readjust the time settings. General controls Setting clock manually. 1. Press and hold Set Time to enter the clock setting mode. 2. Press HOUR+ and MINUTE+ to adjust the time. Press and hold to adjust the time value quickly. The digits on the display ash in clock setting mode. The clock is in 12 hour format. The AM or PM indicator will illuminate to indicate the current time setting. 3. Press Set Time again to save the time setting. Radio Setting alarm time and Selecting alarm source. 1. Press and hold Set Alarm 1/ Set Alarm 2 to select ALARM 1 or ALARM 2 setting mode. 2. Press HOUR+ and MINUTE+ to set the alarm time. Press and hold to decrease or increase the time value quickly. The digits ash on the display in alarm time setting mode. The clock is in 12 hour format. The AM or PM indicator will light to show the current time. Alarm function 1. Connect your auxiliary source (e.g. mp3 player) to the AUX input jack on the right side of the unit with an audio cable (not included). 2. Turn on your auxiliary source (mp3 player, smartphone, etc.). 3. Press FM/AUX to listen to auxiliary source. The AUX indicator on the front will turn on. Press FM/AUX again to switch back to listen to the radio, or press OFF to turn off audio playback. Press BRIGHTNESS to switch between HI (high) or LO (low) to adjust the brightness of the display. Use the USB charging port to charge your smartphone or to power USB powered devices such as a USB type lamp or fan. your cell phone USB cable (not included) To connect your cell phone for charging: Use a USB cable (not included) to connect your cell phone to the USB connector of the unit. Your cell phone should start charging. In sleep mode, the audio playback will turn off automatically after a specified time (up to 2 hours). 1. Press SLEEP to activate the sleep countdown timer. 2. Press SLEEP repeatedly to cycle through the available durations for Sleep Mode (90min, 80min, 70min ... 10min or OFF). The maximum time is 90 minutes. 3. To view remaining time in sleep mode, press and hold SLEEP. 4. To cancel the sleep function, press OFF. Sleep functionAuxiliary source Brightness control USB chargingWarranty information 12 Month Limited Warranty Applies to RCA Clock Radios VOXX Accessories Corporation (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, les, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems. This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state. Recommendations before returning your product for a warranty claim: Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below. Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings. Vox Return Centre, c/o Genco ATC, 700 Commerce Parkway West Drive, Suite C, Greenwood, IN 46143 1-800-645-4994 For Canada Customers, please ship to: Vox Return Centre c/o Genco 6685 Kennedy Road, Unit#3, Door 14, Mississauga, Ontario L5T 3A5 IMPORTANT SAFETY INSTRUCTIONSPLEASE READ AND SAVE THIS FOR FUTURE REFERENCE Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. ADDITIONAL SAFETY INFORMATION The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position. Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide. Apparatus shall not be exposed to dripping or splashing and no objects led with liquids, such as vases, shall be placed on the apparatus. Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent airflow through vent openings. Do not place lighted candles, cigarettes, cigars, etc. on the product. Care should be taken so that objects do not fall into the product. Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components. The marking information is located at the bottom of apparatus. To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains. AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. • No naked flame sources such as lighted candles should be placed on the apparatus. Attention should be drawn to the environmental aspects of battery disposal. The use of apparatus in moderate climates. Important battery precautions Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture. • Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more. • If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak. Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury. Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like. EcologyHelp protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles. Electrical power informationAC/DC Adaptor: Input: 100 - 240 V ~ AC 50/60 Hz Output: 5.0 V---DC 1.2A Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Portable Cart Warning FCC InformationFCC Information English BeepAlarm 1 USB CHARGING CLOCK RADIOAlarm 2Beep MusicAux SleepPM FM 3. Press Set Alarm 1/ Set Alarm 2 again to save the time setting. 4. Press Set Alarm 1/ Set Alarm 2 repeatedly to select your choice of alarm source (Beep / Music / Off). The corresponding alarm setting icon will light when alarm is set to activate. Wake to alarmThe unit is equipped with GRAB-U-WAKE. The alarm volume will increase gradually to its maximum in about 30 to 45 seconds. Ways to turn off alarm To silence the alarm function momentarily, press SNOOZE. The alarm or radio will activate again when the snooze period (9 minutes) is over. (see SmartSnooze™ section for more info) To turn off the alarm, press OFF. The alarm will activate again the next day. To disable the alarm function completely, press Set Alarm 1/ Set Alarm 2 repeatedly until no alarm mode icon shows on the display. RC142Alkaline (1.5V) battery is recommended. Carbon-zinc battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if alarm is not operated) which should take care of short, nuisance-type AC power failures. To preserve battery life, the unit should remain plugged into an AC outlet. As the battery gets older, its voltage drops and memory may be lost. Be sure to replace the battery periodically. Battery should be removed if the unit will be stored for more than one month. A leaky battery can badly damage the clock radio. Charging function may not be supported for all phones or electronic devices. If wake to Music is selected, the alarm will playback the last tuned radio station when it goes off. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment. Industry Canada Regulatory Information CAN ICES-3 (B)/NMB-3 (B) Avis d'Industrie Canada CAN ICES-3 (B)/NMB-3 (B) Power failure indicatorIf you have not installed the two AA batteries in the product, or the batteries run out while AC/DC adaptor is disconnected, all the settings (clock and alarm) will be lost. After AC/DC adaptor is reconnected, the Digital Display will ash to indicate that power was interrupted and you should readjust the time settings. General controls Setting clock manually. 1. Press and hold Set Time to enter the clock setting mode. 2. Press HOUR+ and MINUTE+ to adjust the time. Press and hold to adjust the time value quickly. The digits on the display ash in clock setting mode. The clock is in 12 hour format. The AM or PM indicator will illuminate to indicate the current time setting. 3. Press Set Time again to save the time setting. Radio Setting alarm time and Selecting alarm source. 1. Press and hold Set Alarm 1/ Set Alarm 2 to select ALARM 1 or ALARM 2 setting mode. 2. Press HOUR+ and MINUTE+ to set the alarm time. Press and hold to decrease or increase the time value quickly. The digits ash on the display in alarm time setting mode. The clock is in 12 hour format. The AM or PM indicator will light to show the current time. Alarm function 1. Connect your auxiliary source (e.g. mp3 player) to the AUX input jack on the right side of the unit with an audio cable (not included). 2. Turn on your auxiliary source (mp3 player, smartphone, etc.). 3. Press FM/AUX to listen to auxiliary source. The AUX indicator on the front will turn on. Press FM/AUX again to switch back to listen to the radio, or press OFF to turn off audio playback. Press BRIGHTNESS to switch between HI (high) or LO (low) to adjust the brightness of the display. Use the USB charging port to charge your smartphone or to power USB powered devices such as a USB type lamp or fan. your cell phone USB cable (not included) To connect your cell phone for charging: Use a USB cable (not included) to connect your cell phone to the USB connector of the unit. Your cell phone should start charging. In sleep mode, the audio playback will turn off automatically after a specified time (up to 2 hours). 1. Press SLEEP to activate the sleep countdown timer. 2. Press SLEEP repeatedly to cycle through the available durations for Sleep Mode (90min, 80min, 70min ... 10min or OFF). The maximum time is 90 minutes. 3. To view remaining time in sleep mode, press and hold SLEEP. 4. To cancel the sleep function, press OFF. Sleep functionAuxiliary source Brightness control USB chargingWarranty information 12 Month Limited Warranty Applies to RCA Clock Radios VOXX Accessories Corporation (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, les, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems. This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state. Recommendations before returning your product for a warranty claim: Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below. Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings. Vox Return Centre, c/o Genco ATC, 700 Commerce Parkway West Drive, Suite C, Greenwood, IN 46143 1-800-645-4994 For Canada Customers, please ship to: Vox Return Centre c/o Genco 6685 Kennedy Road, Unit#3, Door 14, Mississauga, Ontario L5T 3A5 IMPORTANT SAFETY INSTRUCTIONSPLEASE READ AND SAVE THIS FOR FUTURE REFERENCE Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. ADDITIONAL SAFETY INFORMATION The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position. Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide. Apparatus shall not be exposed to dripping or splashing and no objects led with liquids, such as vases, shall be placed on the apparatus. Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent airflow through vent openings. Do not place lighted candles, cigarettes, cigars, etc. on the product. Care should be taken so that objects do not fall into the product. Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components. The marking information is located at the bottom of apparatus. To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains. AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. • No naked flame sources such as lighted candles should be placed on the apparatus. Attention should be drawn to the environmental aspects of battery disposal. The use of apparatus in moderate climates. Important battery precautions Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture. • Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more. • If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak. Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury. Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like. EcologyHelp protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles. Electrical power informationAC/DC Adaptor: Input: 100 - 240 V ~ AC 50/60 Hz Output: 5.0 V---DC 1.2A Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Portable Cart Warning FCC InformationFCC Information English BeepAlarm 1 USB CHARGING CLOCK RADIOAlarm 2Beep MusicAux SleepPM FM 3. Press Set Alarm 1/ Set Alarm 2 again to save the time setting. 4. Press Set Alarm 1/ Set Alarm 2 repeatedly to select your choice of alarm source (Beep / Music / Off). The corresponding alarm setting icon will light when alarm is set to activate. Wake to alarmThe unit is equipped with GRAB-U-WAKE. The alarm volume will increase gradually to its maximum in about 30 to 45 seconds. Ways to turn off alarm To silence the alarm function momentarily, press SNOOZE. The alarm or radio will activate again when the snooze period (9 minutes) is over. (see SmartSnooze™ section for more info) To turn off the alarm, press OFF. The alarm will activate again the next day. To disable the alarm function completely, press Set Alarm 1/ Set Alarm 2 repeatedly until no alarm mode icon shows on the display. RC142Alkaline (1.5V) battery is recommended. Carbon-zinc battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if alarm is not operated) which should take care of short, nuisance-type AC power failures. To preserve battery life, the unit should remain plugged into an AC outlet. As the battery gets older, its voltage drops and memory may be lost. Be sure to replace the battery periodically. Battery should be removed if the unit will be stored for more than one month. A leaky battery can badly damage the clock radio. Charging function may not be supported for all phones or electronic devices. If wake to Music is selected, the alarm will playback the last tuned radio station when it goes off. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment. Industry Canada Regulatory Information CAN ICES-3 (B)/NMB-3 (B) Avis d'Industrie Canada CAN ICES-3 (B)/NMB-3 (B) Power failure indicatorIf you have not installed the two AA batteries in the product, or the batteries run out while AC/DC adaptor is disconnected, all the settings (clock and alarm) will be lost. After AC/DC adaptor is reconnected, the Digital Display will ash to indicate that power was interrupted and you should readjust the time settings. General controls Setting clock manually. 1. Press and hold Set Time to enter the clock setting mode. 2. Press HOUR+ and MINUTE+ to adjust the time. Press and hold to adjust the time value quickly. The digits on the display ash in clock setting mode. The clock is in 12 hour format. The AM or PM indicator will illuminate to indicate the current time setting. 3. Press Set Time again to save the time setting. Radio Setting alarm time and Selecting alarm source. 1. Press and hold Set Alarm 1/ Set Alarm 2 to select ALARM 1 or ALARM 2 setting mode. 2. Press HOUR+ and MINUTE+ to set the alarm time. Press and hold to decrease or increase the time value quickly. The digits ash on the display in alarm time setting mode. The clock is in 12 hour format. The AM or PM indicator will light to show the current time. Alarm function 1. Connect your auxiliary source (e.g. mp3 player) to the AUX input jack on the right side of the unit with an audio cable (not included). 2. Turn on your auxiliary source (mp3 player, smartphone, etc.). 3. Press FM/AUX to listen to auxiliary source. The AUX indicator on the front will turn on. Press FM/AUX again to switch back to listen to the radio, or press OFF to turn off audio playback. Press BRIGHTNESS to switch between HI (high) or LO (low) to adjust the brightness of the display. Use the USB charging port to charge your smartphone or to power USB powered devices such as a USB type lamp or fan. your cell phone USB cable (not included) To connect your cell phone for charging: Use a USB cable (not included) to connect your cell phone to the USB connector of the unit. Your cell phone should start charging. In sleep mode, the audio playback will turn off automatically after a specified time (up to 2 hours). 1. Press SLEEP to activate the sleep countdown timer. 2. Press SLEEP repeatedly to cycle through the available durations for Sleep Mode (90min, 80min, 70min ... 10min or OFF). The maximum time is 90 minutes. 3. To view remaining time in sleep mode, press and hold SLEEP. 4. To cancel the sleep function, press OFF. Sleep functionAuxiliary source Brightness control USB chargingWarranty information 12 Month Limited Warranty Applies to RCA Clock Radios VOXX Accessories Corporation (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, les, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems. This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state. Recommendations before returning your product for a warranty claim: Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below. Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings. Vox Return Centre, c/o Genco ATC, 700 Commerce Parkway West Drive, Suite C, Greenwood, IN 46143 1-800-645-4994 For Canada Customers, please ship to: Vox Return Centre c/o Genco 6685 Kennedy Road, Unit#3, Door 14, Mississauga, Ontario L5T 3A5 IMPORTANT SAFETY INSTRUCTIONSPLEASE READ AND SAVE THIS FOR FUTURE REFERENCE Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. ADDITIONAL SAFETY INFORMATION The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position. Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide. Apparatus shall not be exposed to dripping or splashing and no objects led with liquids, such as vases, shall be placed on the apparatus. Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent airflow through vent openings. Do not place lighted candles, cigarettes, cigars, etc. on the product. Care should be taken so that objects do not fall into the product. Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components. The marking information is located at the bottom of apparatus. To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains. AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. • No naked flame sources such as lighted candles should be placed on the apparatus. Attention should be drawn to the environmental aspects of battery disposal. The use of apparatus in moderate climates. Important battery precautions Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture. • Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more. • If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak. Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury. Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like. EcologyHelp protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles. Electrical power informationAC/